

Caster Pin Change


Tools needed: Vise, Rubber, plastic or rawhide mallet.



Step 1: Place raised portion of existing caster pin securely in a vise



Step 2: Using a rubber or plastic mallet, gently strike caster to remove it from the existing pin.

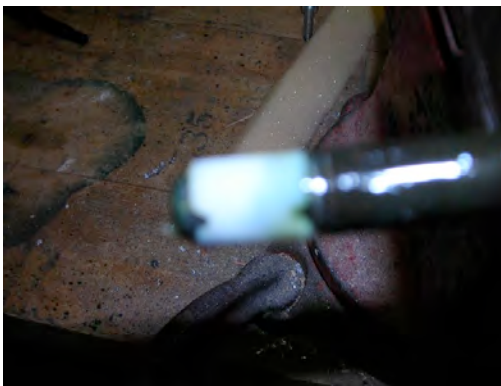

Step 3: Make sure that the white plastic ferrule came out with the pin. If not, remove it from caster hole.



Step 4: Place a new white plastic ferrule on a new caster pin.



Step 5: Place ferrule end of new pin in caster hole and tap pin into place with rubber of plastic mallet.